

This is not a dishwasher **This is a dish sanitizer**

Instructions

- **Turn on 20 minutes before first use to allow it to pre-heat.**
- **Rinse all dishes thoroughly.** There is no food grinder like in your home machine and food particles become trapped in the screens.
- **After last load, turn machine off.**
- **Press and hold drain button until no water is visible in bottom of dishwasher.**
- **Unscrew nut and remove washer arm, lift out screen trays**
- **Remove drain plug (pull up) and unscrew nut and remove drain screen. Rinse all parts.**
- **Thoroughly drain dishwasher and rinse if needed.**
- **Reassemble.**

